




The kit contains the following components,

Item	Part Number	Description	Qty
1	S/S625-001	Switch (non-latching)	1
2	S/K634-004	Switch Cover	1
3	S/Y756-005	Switch Bracket	1
4	S/CB/500-1-072	Cable	1
5	S/V676-001	Rubber Shroud	1
6	S/FR/500-6-048	No.8 x 1/2" Self-tapping screw	2
7	S/FIXING/079	¼" red shrouded female terminal	2

Either mount the switch using the bracket supplied, or panel mount into a 25mm diameter hole.

Assemble the switch as follows,

1. Cut the tip off the rubber shroud to fit the cable and then slide the shroud on to the cable.

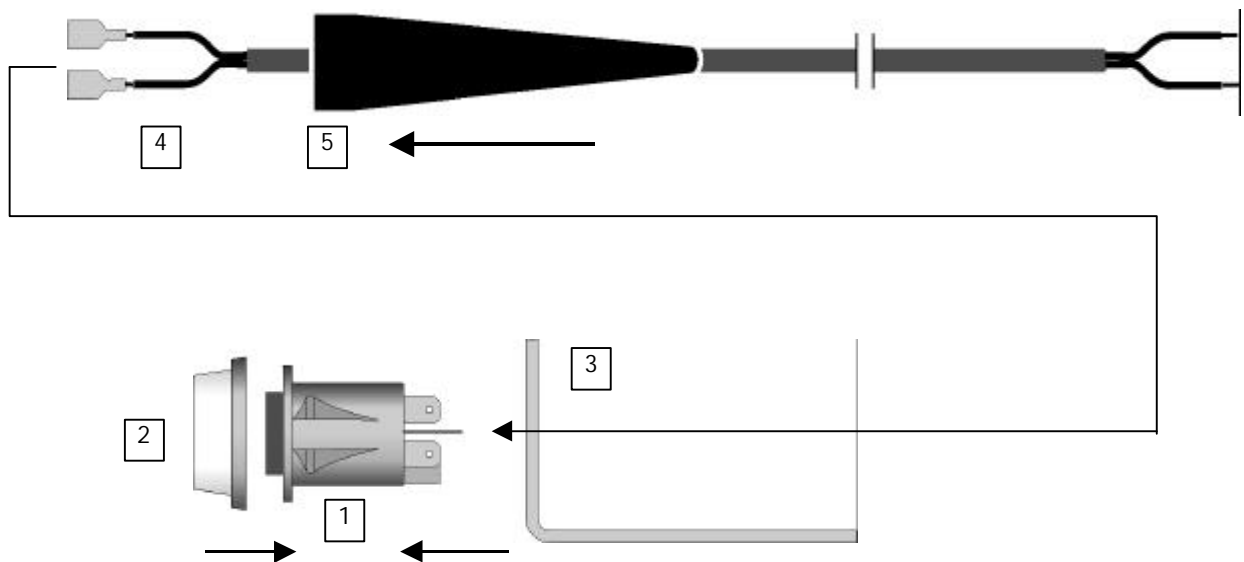

2. Mount the bracket where required on the vehicle using the self tapping screws required. Feed the cable through the bracket and connect to the switch terminals.
3. Press the switch cover onto the switch body, then push the switch body through the bracket.
4. Finally push the shroud up to the bracket.
5. Route the cable back to the junction box. Either coil up excess cable or cut to length.